

ILS LARK LED MULTICODE INSTRUCTIONS

1. TO OPEN THE LOCK

- 1.1 Ensure outer dial is fully turned anti-clockwise.
- 1.2 Press * and wait for second Beep (see below for full details).
- 1.3 Enter your code followed by # (Your code consists of 4 digits plus 2 digits as identification (00-09)).

Turn outer dial clockwise 1/4 turn within 5 seconds.

Instruction	Lock Response			
Press *	LED's ON	Green led x 1	Red led x 3	Beep x 2

NOTE: If on the last beep the red LED stays on for 4 seconds the lock should still work, but the batteries need changing (only use Duracell AA).

Instruction	Lock Response	
	Correct Code Used	Incorrect Code Used
Enter your code within 10 seconds of third Red flash and second Beep. <i>For example 1,2,3,4,01 followed by #</i>	Green LED will flash and a series of Beeps will be heard. You now have approximately 5 seconds to turn the outer dial clockwise to open the lock.	Red LED will flash and one Beep will be heard. You will need to start again. This indicates a wrong code.

2. TO CHANGE YOUR CODE

Always have the door open when you change your code.

- 2.1 Go through opening sequence 1.1 to 1.3.
- 2.2 Whilst Green LED is flashing to signify open re-enter your code followed by ##.
- 2.3 The Red LED will come on and stay on.
- 2.4 Enter new code which must be 4 digits long plus your identification (e.g. 1111.01) followed by #.
- 2.5 Now the Green LED will be on also.
- 2.6 Re-enter new code (e.g. 1111.01) followed by #.
- 2.7 If you have done this correctly the LED's will go off for 1 second then both Red and Green LED's will flash, and a series of Beeps will be heard signifying acceptance of the new code.

Now try your new code **before** shutting the door.

NOTE: If a mistake is made start again from the beginning.

3. MANAGER CODE INSTRUCTIONS

Factory code: 99999999#.

Manager's code operates, as for a user code, but must be 8 digits.

3.1 To Change Manager Code:

Proceed as for user code (point 2 above) but using manager code.

3.2 To Change User Code with a Manager Code:

Open lock with manager code

3.3 Whilst lock is open re-enter manager code again followed by ## (as if to change your manager's code), but now press # once more. Red LED will flash, the beeper will sound once and Red LED will stay on.


You are now able to change or cancel a user code in the normal way.

Remember the user code you are changing for example 03 must be 4 digits followed by 03 (1111 03)


To cancel any user code with the manager code you use the manager code to set it to 0000+ the identification (e.g. 0000 03). This code is now not usable until re-set to another number by the manager code.

4. SETTING THE TIME LOCK

4.1 Press * and wait for the second beep.

4.2 Press  the big padlock symbol.

4.3 Enter your code followed by #.

4.4 Press  the big padlock symbol again, and the Red and Green LED's will flash alternatively for the time lock period (e.g.: 3 hours).