

## ILS MULTI LARK LOCK OPERATIONAL FUNCTIONS SCHEMATIC

The Lark lock will come with the Master code active (505050 50)


The master code must be changed and then enable the sub master codes which in turn can enable other codes.

The master code can enable other types of codes and program the lock, open, close times etc.

Sub master codes can do the same but only if enabled by master code first.

MASTER and SUB codes can not open the safe.

TIME DELAY  
 AUTO TIME LOCKING  
 AUTO SUMMER/WINTER CHANGE  
 VACATION TIMES  
 CLOSE TILL NEXT OPEN  
 SHORT CLOSE  
 YEAR 2000 COMPLIANT

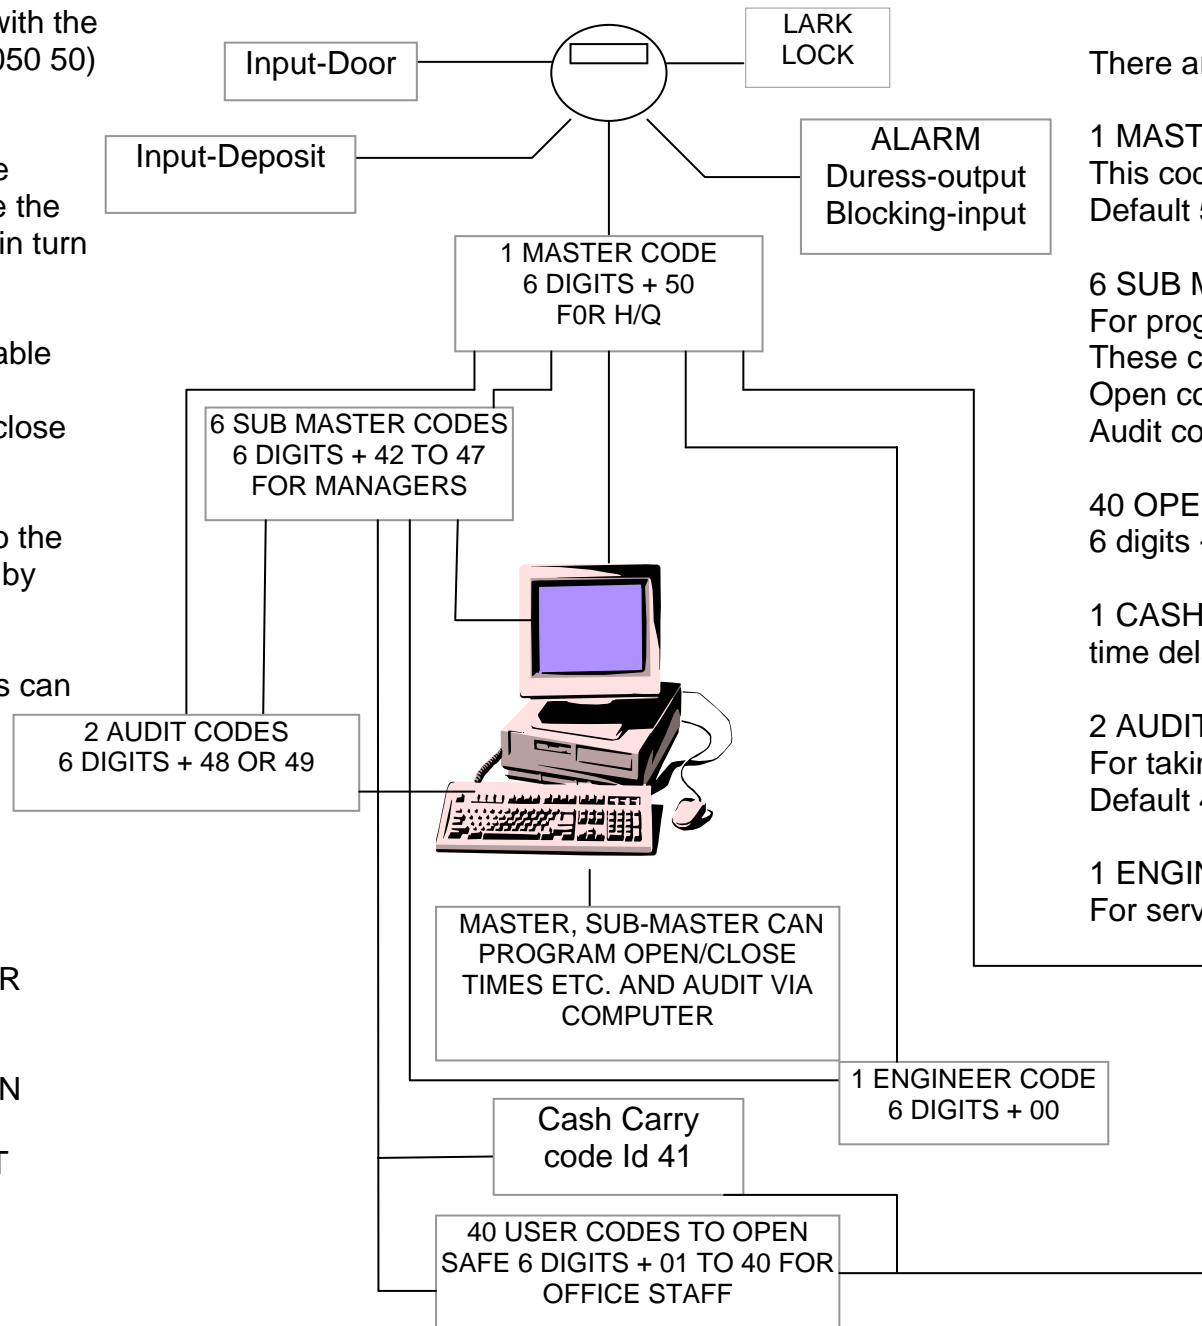

There are 51 codes in each lock.

1 MASTER – for Head office  
This code must enable others  
Default 50505050

6 SUB MASTER CODES -  
For programming and taking an audit.  
These codes can also enable/disable  
Open codes, Engineering code and  
Audit codes. 6 digits + 42 to 47

40 OPENING CODES for Office staff  
6 digits + 01 to 40

1 CASH CARRY CODE to over-ride  
time delay 6 digits+41

2 AUDIT CODES  
For taking an audit only  
Default 48484848 & 49494949

1 ENGINEERING CODE  
For service work 6 digits + 00